



GRILL LIGHT - OWNER'S INSTRUCTIONS

The Coleman® Grill Light utilizes the latest LED technology to achieve the brightest output and most energy efficiency possible. The maximum output is 200 Lumens in 'high' mode and 80 Lumens in 'low' mode. It's capable of a beam distance of 325 feet and is impact and water resistant. Keep this manual for future reference.

⚠ CAUTION: Read all instructions and warnings before operating!

⚠ WARNING: To avoid serious injury or death; read and follow all of the safety statements, installation instructions, use and care directions outlined in this manual, before attempting to operate.

1. This fixture is not explosion-proof. **Do not** use in potentially dangerous locations, such as in flammable or explosive atmospheres.

⚠ CAUTION: Keep dry. Do not open, drop, short-circuit, incinerate, expose to temperatures higher than 140°F, or use if damaged.

2. **NEVER** operate the light with the clear protective glass broken or removed.
3. **NEVER** look directly into light source. LEDs are extremely bright and can damage eyes with prolonged exposure.
4. **KEEP AWAY** from heating vents, radiators, or other sources of heat.
5. **KEEP OUT OF REACH OF CHILDREN.**
6. **FOR INDOOR AND OUTDOOR USE.**
7. **Do not** submerge in water.
8. **Do** replace all batteries at the same time for optimal use.
9. **Do not** attempt to repair or alter the product.

⚠ ATTENTION: Do not mount this grill light on a surface that can become hot to the touch.

SPECIFICATIONS

Power	3 AA Batteries (not included)
Light Output	200 Lumen (high), 80 Lumen (low)
Battery Life	8 Hours (high), 20 Hours (low)
Moisture Resistance	To IP-54 rating
Beam Distance	325 feet
Weight	0.63 lbs. (0.29 kg)
Durable aluminum housing	
Flexible neck adjusts 360° to brighten up your grilling area.	
Impact resistant, dustproof and water resistant.	
Magnetic base for hands-free use.	

Battery Installation:

1. Open the battery cover.
2. Insert 3 NEW AA batteries accordingly to polarity indicators (Batteries sold separately).
3. Reposition the battery cover.

Operating Instructions:

1. Press the button to turn your grill light to 'HIGH'.
2. Press the button a second time for 'OFF'.
3. Press the button a third time for 'LOW'.
4. Press the button a fourth time for 'OFF'.

Storage:

- Always remove batteries when storing the light for long periods of time.
- Protect from water and environmental damage. Store indoors when possible.

ONE YEAR LIMITED WARRANTY.

If this product fails due to a defect in materials or workmanship, return to the retail establishment where the product was purchased with your proof of purchase. This warranty is void if damage or defect has resulted from accident, abuse, misuse or faulty repair. In no event will Active Products Int. be liable for any consequential, special, incidental, or indirect damages of any kind arising out of the use or misuse of this product.

Contact us at www.colemanbbqs.com

MADE IN CHINA

Distributed by Active Products International, Ltd.

6A-48 The Donway West, Suite #856, Toronto, ON M3C 2E8

©2023 The Coleman Company, Inc.

Coleman,  and  are registered trademarks of The Coleman Company, Inc., used under license.